

Replacing Rubber Components on your **burco** Redi Rack™



A Burco® Finger lock™ removal and replacement

To remove and replace Finger locks, grab the longest portion of the Finger lock and pull upward forcefully. Finger locks are set in channels in the top caps. **Tip:** Spray Window Glo® onto the top cap for easier removal.



B Burco® Top cap removal and replacement

To remove and replace top cap, complete step A prior to continuing.



Push mast tubes down for more clearance. Lift up on the top caps alternating sides repeatedly until top caps slide off the metal masts. **Tip:** Spray Window Glo® under the top caps for easy removal.



C Burco® Mast tubing removal and replacement

To remove and replace mast tubes, complete steps A & B prior to continuing.

Pull rubber mast tubes away from the metal masts and spray Window Glo® between rubber tubing and metal masts. Twist the rubber mast tubes to work Window Glo down the metal masts. Once lubricated, pull the rubber mast tubes off of the metal masts.

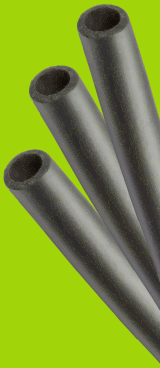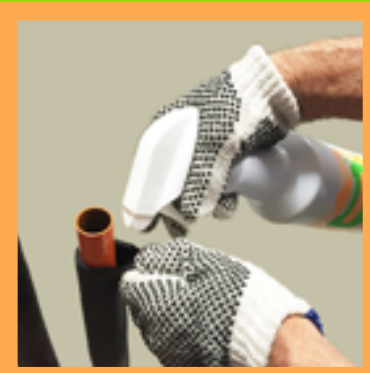

D Burco® Bottom rubber strip removal and replacement

To remove and replace bottom rubber strips, complete steps A, B, and C prior to continuing.

Spray Window Glo™ directly to metal masts. Work the bottom rubber strips up off the masts evenly. Note: All rubber components must be removed from the masts to remove or replace bottom rubber strip.



INSTALL

To install new rubber components, liberally spray Window Glo™ directly to metal rack to reduce friction when installing. Please wear installation gloves, eye protection, and install in a well ventilated area.