

NOT ON THIS SHELF? MORE MIRRORS AVAILABLE. ASK AN ASSOCIATE!



burco box FIT GUIDE



MAKE	MODEL	YEARS		DRIVER	PASSENGER
BUICK	LESABRE	2000	2005	2752	3266
CADILLAC	DEVILLE	2000	2005	2846	3641
CADILLAC	ESCALADE	1999	2000	2252	3076
CADILLAC	ESCALADE	2002	2002	2734	3254
CADILLAC	ESCALADE	2002	2006	2780	3254
CADILLAC	ESCALADE	2002	2006	4017S	3254HS
CADILLAC	ESCALADE	2002	2006	4017S	3254S
CADILLAC	ESCALADE	2007	2008	4110S	5210S
CADILLAC	ESCALADE	2007	2014	4111	5211
CADILLAC	ESCALADE ESV	2003	2006	2780	3254
CADILLAC	ESCALADE ESV	2003	2006	4017S	3254HS
CADILLAC	ESCALADE ESV	2003	2006	4017S	3254S
CADILLAC	ESCALADE ESV	2007	2014	4111	5211
CADILLAC	ESCALADE ESV	2007	2008	4110S	5210S
CADILLAC	ESCALADE EXT	2002	2006	2780	3254
CADILLAC	ESCALADE EXT	2002	2002	2734	3254
CADILLAC	ESCALADE EXT	2002	2006	4017S	3254HS
CADILLAC	ESCALADE EXT	2002	2006	4017S	3254S
CADILLAC	ESCALADE EXT	2007	2013	4111	5211
CADILLAC	ESCALADE EXT	2007	2008	4110S	5210S
CADILLAC	SEVILLE	1998	2004	2846	3641
CHEVROLET	AVALANCHE	2007	2013	4111	5211
CHEVROLET	AVALANCHE	2007	2008	4110S	5210S
CHEVROLET	AVALANCHE 1500/2500	2002	2006	2734	3254
CHEVROLET	AVALANCHE 1500/2500	2002	2006	2780	3254
CHEVROLET	AVALANCHE 1500/2500	2002	2006	4017S	3254HS
CHEVROLET	AVALANCHE 1500/2500	2002	2006	4017S	3254S
CHEVROLET	BLAZER	1969	1974	2204	2204
CHEVROLET	BLAZER	1987	1994	2216	2216
CHEVROLET	BLAZER	1987	1994	2252	2252
CHEVROLET	BLAZER	1990	1994	2284	3217
CHEVROLET	C10	1975	1986	2216	2216
CHEVROLET	C10 SUBURBAN	1973	1986	2204	2204
CHEVROLET	C10 SUBURBAN	1973	1986	2216	2216
CHEVROLET	C10/C20 SUBURBAN	1980	1986	2252	2252
CHEVROLET	C10/C20/C30	1975	1986	2204	2204
CHEVROLET	C1500	1988	1999	2204	2204
CHEVROLET	C1500	1988	1999	2216	2216
CHEVROLET	C1500	1988	1999	2252	2252
CHEVROLET	C1500	1992	1999	2284	3217
CHEVROLET	C1500	1992	1999	2749	3264

*MULTIPLE VEHICLE MIRROR OPTIONS MAY EXIST. ASK AN ASSOCIATE FOR VERIFICATION PRIOR TO PURCHASE.

Part Suffix Codes: (S) Signal, (HS) Heated/Signal

NOT ON THIS SHELF? MORE MIRRORS AVAILABLE. ASK AN ASSOCIATE!



burco box FIT GUIDE



MAKE	MODEL	YEARS		DRIVER	PASSENGER
CHEVROLET	C1500 SUBURBAN	1992	1999	2252	3076
CHEVROLET	C1500 SUBURBAN	1992	1999	2204	2204
CHEVROLET	C1500 SUBURBAN	1992	1999	2216	2216
CHEVROLET	C1500/C2500 SUBURBAN	1992	1999	2284	3217
CHEVROLET	C1500/C2500 SUBURBAN	1992	1999	2749	3264
CHEVROLET	C20	1975	1986	2216	2216
CHEVROLET	C20 SUBURBAN	1973	1986	2204	2204
CHEVROLET	C20 SUBURBAN	1973	1986	2216	2216
CHEVROLET	C2500	1988	2000	2204	2204
CHEVROLET	C2500	1988	2000	2216	2216
CHEVROLET	C2500	1988	2000	2252	2252
CHEVROLET	C2500	1992	2000	2284	3217
CHEVROLET	C2500	1992	2000	2749	3264
CHEVROLET	C2500 SUBURBAN	1992	1999	2204	2204
CHEVROLET	C2500 SUBURBAN	1992	1999	2216	2216
CHEVROLET	C2500 SUBURBAN	1992	1999	2252	2252
CHEVROLET	C30	1975	1986	2216	2216
CHEVROLET	C3500	1988	2004	2204	2204
CHEVROLET	C3500	1988	2004	2216	2216
CHEVROLET	C3500	1988	2004	2252	2252
CHEVROLET	C3500	1992	2002	2284	3217
CHEVROLET	C3500	1992	2002	2749	3264
CHEVROLET	C3500HD	1991	2002	2204	2204
CHEVROLET	C3500HD	1991	2002	2216	2216
CHEVROLET	C3500HD	1991	2002	2252	2252
CHEVROLET	C3500HD	1992	2002	2284	3217
CHEVROLET	C3500HD	1992	2002	2749	3264
CHEVROLET	G10	1975	1988	2204	2204
CHEVROLET	G10 VAN	1970	1974	2204	2204
CHEVROLET	G10/G20	1988	1995	2252	2252
CHEVROLET	G10/G20/G30	1980	1995	2216	2216
CHEVROLET	G20	1975	1988	2204	2204
CHEVROLET	G20 VAN	1970	1974	2204	2204
CHEVROLET	G30	1975	1988	2204	2204
CHEVROLET	G30	1988	1996	2252	2252
CHEVROLET	G30	1996	1996	2216	2216
CHEVROLET	G30 VAN	1970	1974	2204	2204
CHEVROLET	K10	1975	1986	2204	2204
CHEVROLET	K10 SUBURBAN	1973	1986	2204	2204
CHEVROLET	K10 SUBURBAN	1980	1986	2252	2252
CHEVROLET	K10/K20	1975	1986	2216	2216

*MULTIPLE VEHICLE MIRROR OPTIONS MAY EXIST. ASK AN ASSOCIATE FOR VERIFICATION PRIOR TO PURCHASE.

Part Suffix Codes: (S) Signal, (HS) Heated/Signal

NOT ON THIS SHELF? MORE MIRRORS AVAILABLE. ASK AN ASSOCIATE!



redi cuts®



burco box® FIT GUIDE

MAKE	MODEL	YEARS		DRIVER	PASSENGER
CHEVROLET	K10/K20 SUBURBAN	1973	1986	2216	2216
CHEVROLET	K1500	1988	1999	2204	2204
CHEVROLET	K1500	1988	1999	2216	2216
CHEVROLET	K1500	1988	1999	2252	2252
CHEVROLET	K1500	1992	1999	2284	3217
CHEVROLET	K1500	1992	1999	2749	3264
CHEVROLET	K1500 SUBURBAN	1992	1999	2204	2204
CHEVROLET	K1500/K2500 SUBURBAN	1992	1999	2284	3217
CHEVROLET	K1500/K2500 SUBURBAN	1992	1999	2749	3264
CHEVROLET	K1500/K2500 SUBURBAN	1992	1999	2216	2216
CHEVROLET	K1500/K2500 SUBURBAN	1992	1999	2252	2252
CHEVROLET	K20	1975	1986	2204	2204
CHEVROLET	K20 SUBURBAN	1973	1986	2204	2204
CHEVROLET	K20 SUBURBAN	1980	1986	2252	2252
CHEVROLET	K2500	1988	2000	2204	2204
CHEVROLET	K2500	1988	2000	2216	2216
CHEVROLET	K2500	1988	2000	2252	2252
CHEVROLET	K2500 SUBURBAN	1992	1999	2204	2204
CHEVROLET	K2500/K3500	1992	2000	2284	3217
CHEVROLET	K2500/K3500	1992	2000	2749	3264
CHEVROLET	K30	1977	1986	2204	2204
CHEVROLET	K30	1977	1986	2216	2216
CHEVROLET	K3500	1988	2000	2204	2204
CHEVROLET	K3500	1988	2000	2216	2216
CHEVROLET	K3500	1988	2002	2252	2252
CHEVROLET	K5 BLAZER	1975	1979	2204	2204
CHEVROLET	K5 BLAZER	1980	1986	2216	2216
CHEVROLET	K5 BLAZER	1980	1986	2252	2252
CHEVROLET	R10 SUBURBAN	1987	1988	2216	2216
CHEVROLET	R10/R20 SUBURBAN	1987	1988	2252	2252
CHEVROLET	R1500/R2500 SUBURBAN	1989	1991	2216	2216
CHEVROLET	R1500/R2500 SUBURBAN	1989	1991	2252	2252
CHEVROLET	R20 SUBURBAN	1987	1988	2216	2216
CHEVROLET	SILVERADO 1500	1999	2006	2734	3254
CHEVROLET	SILVERADO 1500	1999	2006	2765	3279
CHEVROLET	SILVERADO 1500	2006	2018	3912	3911
CHEVROLET	SILVERADO 1500	2007	2013	4111	5211
CHEVROLET	SILVERADO 1500	2007	2008	4110S	5210S
CHEVROLET	SILVERADO 1500 CLASSIC	2007	2007	3912	3911
CHEVROLET	SILVERADO 1500 HD	2006	2006	3912	3911
CHEVROLET	SILVERADO 1500 HD CLASSIC	2007	2007	3912	3911

*MULTIPLE VEHICLE MIRROR OPTIONS MAY EXIST. ASK AN ASSOCIATE FOR VERIFICATION PRIOR TO PURCHASE.

Part Suffix Codes: (S) Signal, (HS) Heated/Signal

NOT ON THIS SHELF? MORE MIRRORS AVAILABLE. ASK AN ASSOCIATE!



redi cuts®



burco box® FIT GUIDE

MAKE	MODEL	YEARS		DRIVER	PASSENGER
CHEVROLET	SILVERADO 1500/2500 HD	2001	2006	2734	3254
CHEVROLET	SILVERADO 1500/2500 HD	2001	2006	2765	3279
CHEVROLET	SILVERADO 1500/2500 HD	2003	2006	4017S	3254HS
CHEVROLET	SILVERADO 1500/2500 HD	2003	2006	4017S	3254S
CHEVROLET	SILVERADO 1500/2500 HD CLASSIC	2007	2007	2734	3254
CHEVROLET	SILVERADO 1500/2500 HD CLASSIC	2007	2007	2765	3279
CHEVROLET	SILVERADO 1500/2500 HD CLASSIC	2007	2007	4017S	3254HS
CHEVROLET	SILVERADO 1500/2500 HD CLASSIC	2007	2007	4017S	3254S
CHEVROLET	SILVERADO 1500/3500	2003	2006	4017S	3254HS
CHEVROLET	SILVERADO 1500/3500	2003	2006	4017S	3254S
CHEVROLET	SILVERADO 1500/3500 CLASSIC	2007	2007	2734	3254
CHEVROLET	SILVERADO 1500/3500 CLASSIC	2007	2007	2765	3279
CHEVROLET	SILVERADO 1500/3500 CLASSIC	2007	2007	4017S	3254HS
CHEVROLET	SILVERADO 1500/3500 CLASSIC	2007	2007	4017S	3254S
CHEVROLET	SILVERADO 2500	1999	2004	2734	3254
CHEVROLET	SILVERADO 2500	1999	2004	2765	3279
CHEVROLET	SILVERADO 2500	2003	2004	4017S	3254HS
CHEVROLET	SILVERADO 2500	2003	2004	4017S	3254S
CHEVROLET	SILVERADO 2500 HD	2006	2019	3912	3911
CHEVROLET	SILVERADO 2500 HD	2007	2008	4110S	5210S
CHEVROLET	SILVERADO 2500 HD CLASSIC	2007	2007	3912	3911
CHEVROLET	SILVERADO 2500/3500 HD	2007	2014	4111	5211
CHEVROLET	SILVERADO 3500	2001	2006	2734	3254
CHEVROLET	SILVERADO 3500	2001	2006	2765	3279
CHEVROLET	SILVERADO 3500	2006	2006	3912	3911
CHEVROLET	SILVERADO 3500 CLASSIC	2007	2007	3912	3911
CHEVROLET	SILVERADO 3500 HD	2007	2019	3912	3911
CHEVROLET	SILVERADO 3500 HD	2007	2008	4110S	5210S
CHEVROLET	SUBURBAN 1500	2007	2008	4110S	5210S
CHEVROLET	SUBURBAN 1500/2500	2000	2006	2734	3254
CHEVROLET	SUBURBAN 1500/2500	2000	2006	2765	3279
CHEVROLET	SUBURBAN 1500/2500	2000	2006	2780	3254
CHEVROLET	SUBURBAN 1500/2500	2003	2006	4017S	3254HS
CHEVROLET	SUBURBAN 1500/2500	2003	2006	4017S	3254S
CHEVROLET	SUBURBAN 1500/2500	2007	2014	4111	5211
CHEVROLET	SUBURBAN 2500	2006	2014	3912	3911
CHEVROLET	SUBURBAN 2500	2007	2008	4110S	5210S
CHEVROLET	TAHOE	1995	2000	2252	3076
CHEVROLET	TAHOE	1995	2000	2749	3264
CHEVROLET	TAHOE	2000	2006	2734	3254
CHEVROLET	TAHOE	2000	2006	2765	3279

*MULTIPLE VEHICLE MIRROR OPTIONS MAY EXIST. ASK AN ASSOCIATE FOR VERIFICATION PRIOR TO PURCHASE.

Part Suffix Codes: (S) Signal, (HS) Heated/Signal

NOT ON THIS SHELF? MORE MIRRORS AVAILABLE. ASK AN ASSOCIATE!



redi cuts®



burco box® FIT GUIDE

MAKE	MODEL	YEARS		DRIVER	PASSENGER
CHEVROLET	TAHOE	2000	2006	2780	3254
CHEVROLET	TAHOE	2003	2006	4017S	3254HS
CHEVROLET	TAHOE	2003	2006	4017S	3254S
CHEVROLET	TAHOE	2007	2014	4111	5211
CHEVROLET	TAHOE	2007	2008	4110S	5210S
CHEVROLET	V10/V20 SUBURBAN	1987	1988	2216	2216
CHEVROLET	V10/V20 SUBURBAN	1987	1988	2252	2252
CHEVROLET	V1500/V2500 SUBURBAN	1989	1991	2216	2216
CHEVROLET	V1500/V2500 SUBURBAN	1989	1991	2252	2252
DODGE	B100/B200	1975	1980	2204	2204
DODGE	B150/B250/B350	1981	1994	2204	2204
DODGE	B300	1975	1980	2204	2204
DODGE	D100	1975	1979	2204	2204
DODGE	D150	1977	1993	2204	2204
DODGE	D200/D300	1975	1980	2204	2204
DODGE	D250/D350	1981	1993	2204	2204
DODGE	RAM 1500	1994	1999	2204	2204
DODGE	RAM 1500/2500	2002	2009	2762	2763
DODGE	RAM 2500	1994	2001	2204	2204
DODGE	RAM 3500	1994	1998	2204	2204
DODGE	RAM 3500	2003	2009	2762	2763
DODGE	RAMCHARGER	1974	1993	2204	2204
FORD	E SUPER DUTY	1996	1983	2204	2204
FORD	E SUPER DUTY	2002	2002	2729	2730
FORD	E-100 ECONOLINE	1973	1983	2204	2204
FORD	E-150 ECONOLINE	1975	2004	2204	2204
FORD	E-150 ECONOLINE	2002	2004	2729	2730
FORD	E-150 ECONOLINE CLUB WAG	1975	2002	2204	2204
FORD	E-150/250	2003	2014	2729	2730
FORD	E-150/350 CLUB WAGON	2003	2005	2729	2730
FORD	E-150/350 ECONOLINE CLUB WAG	2002	2004	2729	2730
FORD	E-200 ECONOLINE	1968	1974	2204	2204
FORD	E-250 ECONOLINE	2002	2005	2729	2730
FORD	E-250 SUPER DUTY	2004	2005	2729	2730
FORD	E-250/E-350 ECONOLINE	1975	2005	2204	2204
FORD	E-300 ECONOLINE	1968	1974	2204	2204
FORD	E-350	2003	2003	2729	2730
FORD	E-350 ECONOLINE	2002	2008	2729	2730
FORD	E-350 SUPER DUTY	1999	2003	2204	2204
FORD	E-350 SUPER DUTY	2004	2018	2729	2730
FORD	E-450 ECONOLINE	2003	2005	2729	2730

*MULTIPLE VEHICLE MIRROR OPTIONS MAY EXIST. ASK AN ASSOCIATE FOR VERIFICATION PRIOR TO PURCHASE.

Part Suffix Codes: (S) Signal, (HS) Heated/Signal

NOT ON THIS SHELF? MORE MIRRORS AVAILABLE. ASK AN ASSOCIATE!



burco box FIT GUIDE



MAKE	MODEL	YEARS		DRIVER	PASSENGER
FORD	E-450 ECONOLINE	2003	2005	2204	2204
FORD	E-450 ECONOLINE SUPER DUTY	2002	2002	2729	2730
FORD	E-450 SUPER DUTY	2003	2017	2729	2730
FORD	ECONOLINE	2003	2006	2729	2730
FORD	ECONOLINE VAN/WAGON	2010	2014	2729	2730
FORD	EXCURSION	2000	2005	2729	2730
FORD	EXPEDITION	1997	2002	2706	3231
FORD	EXPLORER	1995	2005	2936	3737
FORD	EXPLORER SPORT TRAC	2001	2005	2936	3737
FORD	F-100	1975	1983	2204	2204
FORD	F-150	1997	2003	2706	3231
FORD	F-150	2004	2010	2980	3310
FORD	F-150	2011	2014	4438	3323
FORD	F-150 HERITAGE	2004	2004	2706	3231
FORD	F-150/F-250/F-350	1975	1991	2204	2204
FORD	F-250	1997	1999	2706	3231
FORD	F-250/F-350/F-450 SUPER DUTY	1999	2007	2729	2730
FORD	F-350	1997	1997	2706	3231
FORD	RANGER	1995	2005	2936	3737
GMC	C15	1975	1978	2204	2204
GMC	C15	1975	1978	2216	2216
GMC	C15 SUBURBAN	1975	1978	2204	2204
GMC	C15/C25 SUBURBAN	1975	1978	2216	2216
GMC	C1500	1979	1999	2204	2204
GMC	C1500	1979	1999	2216	2216
GMC	C1500	1988	1999	2252	2252
GMC	C1500	1992	1999	2284	3217
GMC	C1500	1992	1999	2749	3264
GMC	C1500 SUBURBAN	1980	1986	2252	2252
GMC	C1500 SUBURBAN	1992	1999	2252	3076
GMC	C1500/C2500 SUBURBAN	1979	1999	2204	2204
GMC	C1500/C2500 SUBURBAN	1979	1999	2216	2216
GMC	C1500/C2500 SUBURBAN	1992	1999	2284	3217
GMC	C1500/C2500 SUBURBAN	1992	1999	2749	3264
GMC	C25 SUBURBAN	1975	1978	2204	2204
GMC	C25/C35	1975	1978	2204	2204
GMC	C25/C35	1975	1978	2216	2216
GMC	C2500	1979	2000	2204	2204
GMC	C2500	1979	2000	2216	2216
GMC	C2500	1988	2000	2252	2252
GMC	C2500	1992	2000	2284	3217

*MULTIPLE VEHICLE MIRROR OPTIONS MAY EXIST. ASK AN ASSOCIATE FOR VERIFICATION PRIOR TO PURCHASE.

Part Suffix Codes: (S) Signal, (HS) Heated/Signal

NOT ON THIS SHELF? MORE MIRRORS AVAILABLE. ASK AN ASSOCIATE!



burco box® FIT GUIDE



MAKE	MODEL	YEARS		DRIVER	PASSENGER
GMC	C2500	1992	2000	2749	3264
GMC	C2500 SUBURBAN	1980	1986	2252	2252
GMC	C2500 SUBURBAN	1992	1999	2252	2252
GMC	C2500/C3500	1992	2000	2284	3217
GMC	C3500	1979	2004	2204	2204
GMC	C3500	1979	2004	2216	2216
GMC	C3500	1979	2004	2252	2252
GMC	C3500	1992	2002	2284	3217
GMC	C3500	1992	2002	2749	3264
GMC	C3500HD	1991	2002	2204	2204
GMC	C3500HD	1991	2002	2216	2216
GMC	C3500HD	1991	2002	2252	2252
GMC	C3500HD	1992	2002	2284	3217
GMC	C3500HD	1992	2002	2749	3264
GMC	G15/G25/G35	1975	1978	2204	2204
GMC	G1500	1979	1988	2204	2204
GMC	G1500/G2500	1988	1995	2252	2252
GMC	G1500/G2500/G3500	1980	1995	2216	2216
GMC	G2500/G3500	1979	1988	2204	2204
GMC	G3500	1988	1996	2252	2252
GMC	G3500	1996	1996	2216	2216
GMC	JIMMY	1970	1979	2204	2204
GMC	JIMMY	1980	1991	2216	2216
GMC	JIMMY	1980	1991	2252	2252
GMC	JIMMY	1990	1991	2284	3217
GMC	K15 SUBURBAN	1975	1978	2204	2204
GMC	K15/K25	1975	1978	2204	2204
GMC	K15/K25	1975	1978	2216	2216
GMC	K15/K25 SUBURBAN	1975	1978	2216	2216
GMC	K1500	1979	1999	2204	2204
GMC	K1500	1979	1999	2216	2216
GMC	K1500	1988	1999	2252	2252
GMC	K1500	1992	1999	2749	3264
GMC	K1500 SUBURBAN	1979	1999	2204	2204
GMC	K1500/K2500	1992	1999	2284	3217
GMC	K1500/K2500 SUBURBAN	1979	1999	2216	2216
GMC	K1500/K2500 SUBURBAN	1980	1999	2252	2252
GMC	K1500/K2500 SUBURBAN	1992	1999	2284	3217
GMC	K1500/K2500 SUBURBAN	1992	1999	2749	3264
GMC	K25 SUBURBAN	1975	1979	2204	2204
GMC	K2500	1988	2000	2252	2252

*MULTIPLE VEHICLE MIRROR OPTIONS MAY EXIST. ASK AN ASSOCIATE FOR VERIFICATION PRIOR TO PURCHASE.

Part Suffix Codes: (S) Signal, (HS) Heated/Signal

NOT ON THIS SHELF? MORE MIRRORS AVAILABLE. ASK AN ASSOCIATE!



burco box FIT GUIDE



MAKE	MODEL	YEARS		DRIVER	PASSENGER
GMC	K2500 SUBURBAN	1979	1999	2204	2204
GMC	K2500/K3500	1979	2000	2204	2204
GMC	K2500/K3500	1979	2000	2216	2216
GMC	K2500/K3500	1992	2000	2749	3264
GMC	K2500/K3500	1992	2000	2284	3217
GMC	K35	1977	1978	2204	2204
GMC	K35	1977	1979	2216	2216
GMC	K3500	1988	2002	2252	2252
GMC	R1500 SUBURBAN	1988	1991	2204	2204
GMC	R1500 SUBURBAN	1988	1991	2252	2252
GMC	R1500/R2500 SUBURBAN	1988	1991	2216	2216
GMC	R2500 SUBURBAN	1987	1991	2204	2204
GMC	R2500 SUBURBAN	1987	1987	2216	2216
GMC	R2500 SUBURBAN	1987	1991	2252	2252
GMC	SIERRA 1500	1999	2006	2734	3254
GMC	SIERRA 1500	1999	2006	2765	3279
GMC	SIERRA 1500	2006	2018	3912	3911
GMC	SIERRA 1500	2007	2013	4111	5211
GMC	SIERRA 1500	2007	2008	4110S	5210S
GMC	SIERRA 1500 CLASSIC	2007	2007	3912	3911
GMC	SIERRA 1500 HD	2003	2003	4017S	3254HS
GMC	SIERRA 1500 HD	2003	2003	4017S	3254S
GMC	SIERRA 1500 HD	2005	2006	4017S	3254HS
GMC	SIERRA 1500 HD	2005	2006	4017S	3254S
GMC	SIERRA 1500 HD	2006	2006	3912	3911
GMC	SIERRA 1500 HD CLASSIC	2007	2007	3912	3911
GMC	SIERRA 1500/2500 HD	2001	2006	2734	3254
GMC	SIERRA 1500/2500 HD	2001	2006	2765	3279
GMC	SIERRA 1500/2500 HD CLASSIC	2007	2007	2734	3254
GMC	SIERRA 1500/2500 HD CLASSIC	2007	2007	2765	3279
GMC	SIERRA 1500/2500 HD CLASSIC	2007	2007	4017S	3254HS
GMC	SIERRA 1500/2500 HD CLASSIC	2007	2007	4017S	3254S
GMC	SIERRA 1500/2500/3500	2003	2006	4017S	3254HS
GMC	SIERRA 1500/2500/3500	2003	2006	4017S	3254S
GMC	SIERRA 1500/3500 CLASSIC	2007	2007	2734	3254
GMC	SIERRA 1500/3500 CLASSIC	2007	2007	2765	3279
GMC	SIERRA 1500/3500 CLASSIC	2007	2007	4017S	3254HS
GMC	SIERRA 1500/3500 CLASSIC	2007	2007	4017S	3254S
GMC	SIERRA 2500	1999	2004	2734	3254
GMC	SIERRA 2500	1999	2004	2765	3279
GMC	SIERRA 2500	2003	2004	4017S	3254HS

*MULTIPLE VEHICLE MIRROR OPTIONS MAY EXIST. ASK AN ASSOCIATE FOR VERIFICATION PRIOR TO PURCHASE.

Part Suffix Codes: (S) Signal, (HS) Heated/Signal

NOT ON THIS SHELF? MORE MIRRORS AVAILABLE. ASK AN ASSOCIATE!



burco box FIT GUIDE



MAKE	MODEL	YEARS		DRIVER	PASSENGER
GMC	SIERRA 2500	2003	2004	4017S	3254S
GMC	SIERRA 2500 HD	2003	2006	4017S	3254HS
GMC	SIERRA 2500 HD	2003	2006	4017S	3254S
GMC	SIERRA 2500 HD	2006	2019	3912	3911
GMC	SIERRA 2500 HD	2006	2019	3912	3911
GMC	SIERRA 2500 HD	2007	2008	4110S	5210S
GMC	SIERRA 2500 HD	2009	2014	4111	5211
GMC	SIERRA 2500 HD CLASSIC	2007	2007	3912	3911
GMC	SIERRA 3500	2001	2006	2734	3254
GMC	SIERRA 3500	2001	2006	2765	3279
GMC	SIERRA 3500	2006	2006	3912	3911
GMC	SIERRA 3500 CLASSIC	2007	2007	3912	3911
GMC	SIERRA 3500 HD	2007	2019	3912	3911
GMC	SIERRA 3500 HD	2007	2008	4110S	5210S
GMC	SIERRA 3500 HD	2008	2014	4111	5211
GMC	V1500/V2500 SUBURBAN	1987	1991	2204	2204
GMC	V1500/V2500 SUBURBAN	1987	1991	2216	2216
GMC	V1500/V2500 SUBURBAN	1987	1991	2252	2252
GMC	V2500 SUBURBAN	1987	1991	2216	2216
GMC	YUKON	1992	1999	2216	2216
GMC	YUKON	1992	2000	2252	2252
GMC	YUKON	1992	1999	2284	3217
GMC	YUKON	1992	1999	2749	3264
GMC	YUKON	2000	2006	2734	3254
GMC	YUKON	2000	2006	2765	3279
GMC	YUKON	2000	2006	2780	3254
GMC	YUKON	2000	2006	4017S	3254HS
GMC	YUKON	2000	2006	4017S	3254S
GMC	YUKON	2007	2008	4110S	5210S
GMC	YUKON XL 1500	2007	2008	4110S	5210S
GMC	YUKON XL 1500/2500	2000	2006	2734	3254
GMC	YUKON XL 1500/2500	2000	2006	2780	3254
GMC	YUKON XL 1500/2500	2000	2005	2765	3279
GMC	YUKON XL 1500/2500	2003	2006	4017S	3254HS
GMC	YUKON XL 1500/2500	2003	2006	4017S	3254S
GMC	YUKON XL 2500	2006	2014	3912	3911
GMC	YUKON XL 2500	2007	2008	4110S	5210S
HONDA	CR-V	1997	2006	2844	3639
JEEP	GRAND WAGONEER	1984	1993	2204	2204
JEEP	J10/J20	1974	1988	2204	2204
JEEP	WAGONEER	1975	1983	2204	2204

*MULTIPLE VEHICLE MIRROR OPTIONS MAY EXIST. ASK AN ASSOCIATE FOR VERIFICATION PRIOR TO PURCHASE.

Part Suffix Codes: (S) Signal, (HS) Heated/Signal



burco box® FIT GUIDE




MAKE	MODEL	YEARS		DRIVER	PASSENGER
LEXUS	RH400H	2006	2008	4109	5209
LEXUS	RX330	2004	2006	4109	5209
LEXUS	RX350	2007	2009	4109	5209
MERCEDES BENZ	CLK320	1998	2005	2873	3620
MERCEDES BENZ	CLK350	2006	2009	2873	3620
MERCEDES BENZ	CLK430	1999	2003	2873	3620
MERCEDES BENZ	CLK500	2003	2006	2873	3620
MERCEDES BENZ	CLK55 AMG	2001	2006	2873	3620
MERCEDES BENZ	CLK550	2007	2009	2873	3620
MERCEDES BENZ	CLK63 AMG	2007	2009	2873	3620
MERCEDES BENZ	SL500	1999	2004	2873	3620
MERCEDES BENZ	SL55 AMG	2003	2003	2873	3620
MERCEDES BENZ	SL600	1999	2004	2873	3620
MERCEDES BENZ	SLK230	1999	2004	2873	3620
MERCEDES BENZ	SLK32 AMG	2002	2004	2873	3620
MERCEDES BENZ	SLK320	2001	2004	2873	3620
MERCURY	MOUNTAINEER	1997	2005	2936	3737
PLYMOUTH	TRAILDUSTER	1974	1981	2204	2204
VOLKSWAGEN	CABRIO	1999	2002	2831	3702
VOLKSWAGEN	EOS	2007	2008	4104	5204
VOLKSWAGEN	GOLF	1999	2006	2831	3702
VOLKSWAGEN	GTI	2006	2009	4104	5204
VOLKSWAGEN	JETTA	2000	2005	2831	3702
VOLKSWAGEN	JETTA	2005	2014	4104	5204
VOLKSWAGEN	PASSAT	1998	2004	2831	3702
VOLKSWAGEN	PASSAT	2005	2010	4104	5204
VOLKSWAGEN	R32	2008	2008	4104	5204
VOLKSWAGEN	RABBIT	2006	2009	4104	5204
VOLVO	S60/S80/V70	2004	2006	4127	5222



For your convenience, we have included a complementary Redi Connect™ Kit (3810-KIT). Use this kit paired with a Redi Cuts® to make mirror repair possible for vehicles with damaged or missing backing or mounting plates.

*** This kit is only compatible with circular 3-1/4" OEM actuators.**

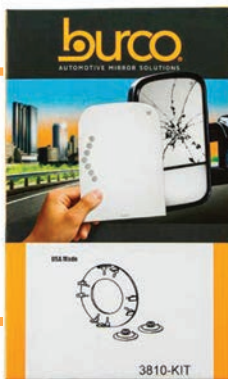

*** MULTIPLE VEHICLE MIRROR OPTIONS MAY EXIST. ASK AN ASSOCIATE FOR VERIFICATION PRIOR TO PURCHASE.**

Part Suffix Codes: (S) Signal, (HS) Heated/Signal